

Sony PLAYSTATION® 3 and PlayStation Portable (PSP™)

1. In the main menu, using the left stick or directional pad, go to “Settings,” then select “Security Settings” by pressing the X button. Options for restricting games are listed under “Parental Control.” A number system indicates the relative level of restriction: the *lower* the number, the *tighter* the restrictions.
2. Each number below corresponds with an ESRB rating category:

2 – EC (Early Childhood 3+)	5 – T (Teen 13+)
3 – E (Everyone 6+)	9 – M (Mature 17+)
4 – E10+ (Everyone 10+)	10 – AO (Adults Only 18+)
3. To set parental controls for the Web browser, in “Security Settings,” select “Internet Browser Start Control.” Your options are “On” or “Off.” Selecting “On” will block access to the Internet.
4. The PLAYSTATION 3 and PSP parental controls are enforced by a four-digit password. The default password is 0000 (four zeros). It is recommended that you reset the password. In the Security Settings menu, select “Change Password.” Enter the default password, and then select a new password.

You can also use “Parental Control” to:

- Block access to DVD and Blu-ray (high-definition) movies by MPAA rating

Tips about PLAYSTATION Network:

- The default settings block content based on registered user age and restrict chat with other players
- Be sure to set up sub accounts for each child

For more on PLAYSTATION 3, PSP and PLAYSTATION Network, visit: www.us.playstation.com/support

